



**SureClose SF** models require a separate gate stop to be installed to prevent the gate from being forced past 90°. Recommended opening setting is 85° to take into consideration possible installation abnormalities.

This package does not contain an external gate stop. It is the purchaser's responsibility to provide one. Absence of a gate stop will void warranty.

D&D recommends installing the gate stop at the bottom of the fence post if gate is lower than 84" (210cm).

**⚠** Tighten firmly **all** hinge pivot screws on both hinges with a suitable Allen Key [to a minimum of 7.5 ft.lbs (10N.m)]

If you have any questions or need this information clarified, please contact us on:

North/South America (714) 677-1300  
AU/NZ 1 800 500203  
EU +31 (0) 3029 19847

**D**<sup>®</sup> **D&D Technologies**  
World's most trusted gate hardware  
[www.ddtechglobal.com](http://www.ddtechglobal.com)

SCOLM000023PA 2/06/2016

**CAUTION - YOU MUST INSTALL A GATE STOP with this product!**

