

INSTALLATION INSTRUCTIONS



TOP PULL

For swimming and other child safety gates, most safety standards specify the following minimum height requirements as being from the bottom of the gate:

1) latch release knob 'F' at minimum 1370mm; 2) fence height of between 1220 & 1830mm. Always confirm these and other requirements with the appropriate pool or safety authorities in your area and install this latch in accordance with the local fence/barrier codes and regulations. Also, pool gate must open outward, away from the pool, so this latch must be fitted to the outside of a pool gate.

Tools: Electric and cordless drills, drill bits, Phillips No. 2 screwdriver (hand & powered types). Note: If mounting to steel or vinyl with metal inserts, it is advisable to pre-drill the holes to prevent screw breakage.

Installation Procedure

1. The gap between gate frame and latch post must be between 10mm and 37mm; 19mm is ideal.

2. Determine the location of the hole for Mounting Bracket 'A' by measuring up from the bottom of the gate, for 1370mm knob height measure up 925mm.

Place Mounting Bracket 'A' on the post as shown, and, using one of the 25mm wafer-head, self-drilling screws, fix the bracket to the post – through the side fixing hole. Now install two more of these screws through the front of the bracket.

3. To install Mounting Bracket 'B' measure up from Bracket 'A' 340mm. Mark this point and fix as '2' above.

NOTE: For 1220mm fences without an extra-high post, this measurement should be 125mm for 1370mm knob height.

Place the Bracket 'B' so that the holes are centered on the marked line. Fix bracket using the same screws as per Bracket 'A'.

(NOTE: In some applications it may be necessary to add a spacer to clear a post cap. Spacers S1, S2 & S3 are for this purpose and should be inserted behind the mounting brackets during installation.)

4. Take the main LATCH BODY 'C' and slide it down onto the Mounting Bracket 'B', ensuring the rear track of the latch slides over brackets 'B', then 'A'.

5. Slide the Latch Body until the bottom of the latch aligns neatly with the lower end of Bracket 'A' (see dashed line 'L'). Take the single 10mm countersunk screw 'H' and secure the Latch Body – DO NOT use a power or cordless drill – to Bracket 'A'.

6. The final part to be installed is the STRIKER BODY 'D'.

Note that the Striker Body slides on a dovetail track within the Mounting Plate (P1, P2). NEVER use a powered drill to adjust this screw. See Diagram 'E'. Locate the Striker Body assembly onto the post as shown.

Position the Striker Body to obtain a 3mm gap between the lower part of the latch and the top of the Striker Body, as shown.

Maintain this gap and fix two 25mm screws through the two main holes of the Striker Body. The two, small (cylindrical) dress plugs supplied should now be pressed into the screw holes.

7. a) Open the gate and secure two more screws through the side leg of the Mounting Plate. Note: If the width of the gate frame is 38mm or greater, follow step b)...

b) With the gate open, adjust the Striker Body using the screwdriver in the adjustment screw. Turn counter-clockwise until the two holes are exposed, as in Diagram (P2). Fix the two remaining screws to secure the Mounting Plate.

8. Use the screwdriver to adjust the Striker Body to align with the Latch Body, as shown in Diagram 'E'. Open and close the gate to check the latch operates correctly. Adjust as necessary at any time after installation to ensure safe operation of the latch. NOTE: Future vertical adjustment of the latch can be achieved by removing the screw 'H', sliding the Latch Body up or down the post to obtain correct operational alignment, then inserting the screw into the appropriate hole.

Swimming pool fences, gates and latches cannot substitute for adult supervision. If using this latch on a swimming pool gate, consult all appropriate local authorities for safety requirements. The latch will operate properly only if installed and maintained in accordance with these instructions.

MAINTENANCE: REMOVE KEY FROM LOCK AFTER USE. Do not lubricate the latch with petroleum-based lubricants at any time; use only powdered graphite. Ensure all screws or bolts are tightened firmly and that the release knob [F] and latching bolt are kept free of sand, ice and other debris which could impair latch performance. Grind or remove any protruding fasteners after installation.

